 


**Jimveo**

# USER MANUAL

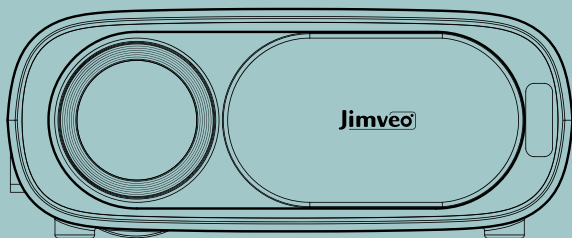

## E30 1080P VIDEO PROJECTOR

WORLD BEAMS WITH JIMVEO

# CONTENTS

<b>CONTACT US</b> .....	<b>001</b>
<b>TROUBLE SHOOTING</b> .....	<b>002</b>
<b>PACKING LIST</b> .....	<b>004</b>
<b>FUNCTION OVERVIEW</b> .....	<b>005</b>
<b>REMOTE CONTROL</b> .....	<b>008</b>
<b>QUICK START</b> .....	<b>009</b>
<b>PERSONALIZED SETTINGS</b> .....	<b>010</b>
<b>FOCUS</b> .....	<b>011</b>
<b>PROJECTOR IMAGE SETTING</b> .....	<b>013</b>
-Installation Method .....	013
-Keystone Correction .....	014
-Zoom Function .....	017
<b>INPUT SOURCE</b> .....	<b>018</b>
<b>WIRELESS PROJECTION</b> .....	<b>024</b>
-For iOS Devices .....	024
-For Android Devices .....	026
-For Window Devices .....	027
<b>BLUETOOTH CONNECTION</b> .....	<b>029</b>
<b>OTHER SETTINGS</b> .....	<b>031</b>
<b>SYSTEM UPDATE</b> .....	<b>032</b>
<b>INSTALLATION</b> .....	<b>034</b>
<b>PROJECTOR SPECIFICATIONS</b> .....	<b>035</b>

## TROUBLE SHOOTING

Our high-qualified customer services team is waiting to hear from you and answer any of your questions 24 hours a day and 7 days a week. We are happy to receive your message about the problems you met so that we can help you to get out of the trouble. You can contact us through email.

 **US:Support\_us@jimveo.com**

 **EU/CA: Support@jimveo.com**

 **JP: Support\_jp@jimveo.com**

**Q: Where can I find the instructional videos on how to set up the projector?**

A: We have prepared detailed operation videos on YouTube, which contains almost every step of operating the projector, like WiFi connection, wired connection and so on. Just search "Jimveo" on YouTube and you will find them

**Q: The projector is still not clear enough after auto-focus, what should I do?**

A: If the image is not clear enough after the auto focus, please press the [F+] and [F-] button to do a fine-tune.

**Q: I can't play Netflix video on the projector, why?**

A: There are quite a few video platforms like Netflix, Disney+ and Hulu are under HDCP copyright protection, and thus do not support being displayed on a projector, this is the same situation for all projectors. You would need a TV stick to enjoy these video platforms.

**Q: I connect the projector and my phone with same WiFi, but I can't find the projector's name when I want to do screen mirroring.**

A: ① Please make sure your WiFi is in good running speed.

② You can try to reset WiFi or restart the projector, or restore factory default. You can find the operation videos on our "Jimveo" channel on YouTube.

③ If you tried the above ways and still can't solve the problem, please send email to our support team along with your order number. We will find solutions for you.

**Q: I can't connect the projector with my sound bar. How should I fix this problem?**

① Please make sure you followed our operation steps correctly. And make sure your sound bar has not connected to any other Bluetooth devices.

② Since there are so many different kinds of Bluetooth speakers on the market. There do have some speakers not compatible with our projector. This is a problem all the projectors on the market are facing and working to improve. Please email us for further instructions.

**Q: I found a dark spot on the projection screen. How do I remove it?**

A: ① We have provided dust-clean instructions and instruments along with the product. We also prepared videos on YouTube teaching how to remove dark spots. You can try to remove the dust by yourself.

② If you can not remove the dark spot by yourself. Please contact us through email.

**Q: I received the projector but it has no remote control. Could you send it to me?**

A: If the product you receive is missing any accessories, please let us know what accessory do you miss. We will send them to you as soon as possible.

**Q: The projector worked for ten minutes and suddenly shut down. What should I do?**

A: We promise that our projector has been carefully checked before shipping. However the long time and distance shipping may cause damage to the projector. If your projector can not work, please contact us and we will offer you satisfactory solution.

**Q: I contact the customer service team as suggested, but has not received any reply. Why?**

A: We promise that we will reply to all the emails within 24 hours. If you haven't received any reply from us more than one day, then maybe our email has been blocked or has gone to the spam email box. Please send us email again or contact us by Instagram (see QR code on Page 01).

Thank you for your understanding.

**Q: There appears big brown spots in the projector's screen after I use the it for about 3 months. Can I have this problem solved?**

A: ① This phenomenon is often caused by overheating of the projector. Please make sure the projector's ventilation inlet and outlet uncovered to ensure that the projector can dissipate heat properly.

② Please turn off the projector, wait for a few hours until it totally cooled off. And then restart the projector.

③ If you can not solve your problem, please feel free to contact us. Our projector offers three-year warranty. We will be responsible for any quality problem of it.


Tips: To prolong the life of the projector, we recommend you to clean or exchange the dustproof net every two months. If you need the dustproof nets, please email us, we will send 10 Pieces of Dust-Proof Net for you for free so that you could replace it regularly.

 **US:Support\_us@jimveo.com**


 **EU/CA: Support@jimveo.com**

 **JP: Support\_jp@jimveo.com**

# PACKING LIST

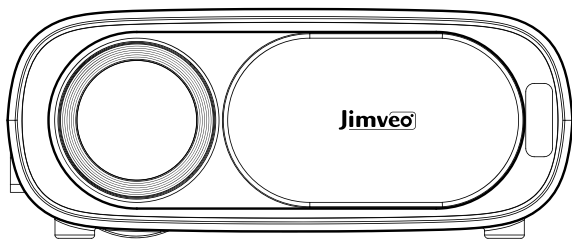

E30

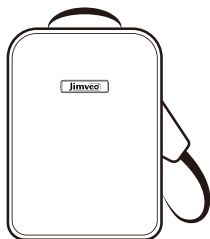 


Backpack




Remote




User Manual

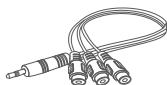

AV Cable

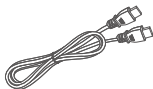


HD Cable

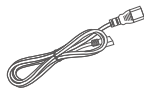


Power Cable

## NOTICE

### Recommended

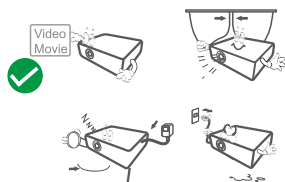


### Not Recommended

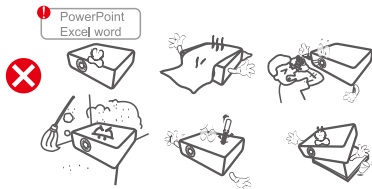


## FUNCTION OVERVIEW

### Top View

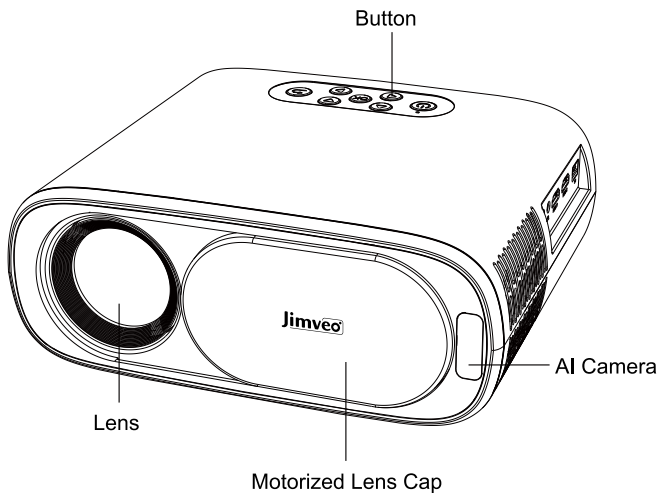


### Control Panel

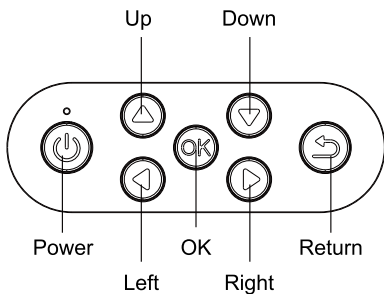


## Side View


### A. Left side

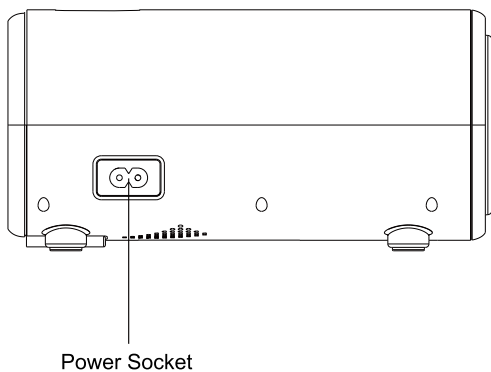

### B. Right side

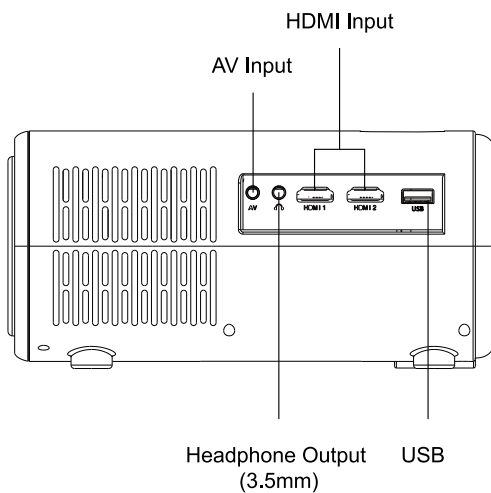


## Rear View

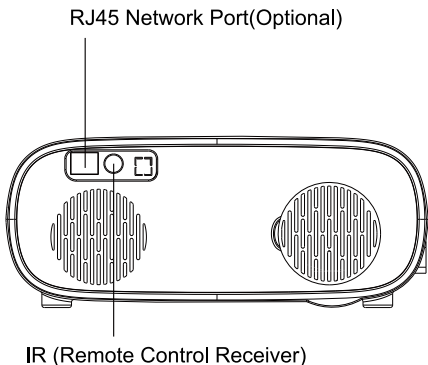


Note: RJ45 network port can directly connect the network cable to the projector, which can reduce the interference of other devices and ensure more smoother connection. (The fluency of connection will be affected by the network environment. A bandwidth of 100Mbit or more is recommended.)

## Bottom View

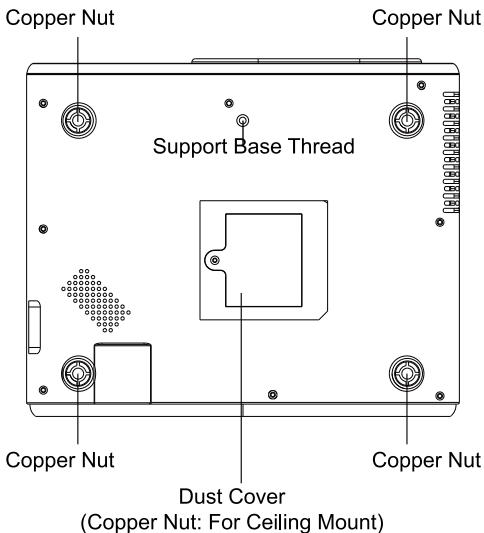




## REMOTE CONTROL

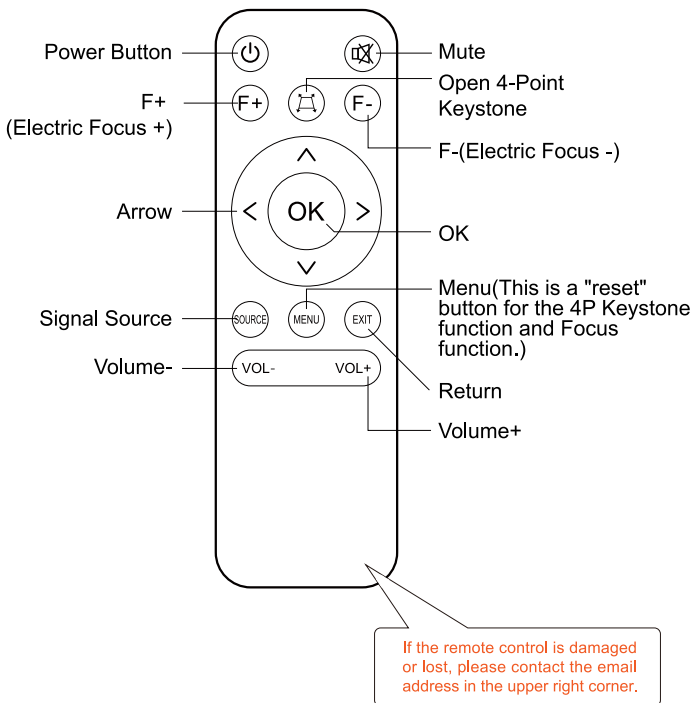


### Installation of the remote control

1. Install 2 pieces of AAA batteries into the remote before using it. Do not combine new batteries with old ones in a remote controller, which can cause operation failure due to insufficient power supply.
2. When using the remote controller, please make sure that the signal transmitter of the remote controller aims at the infrared signal receiver of the projector.


## QUICK START

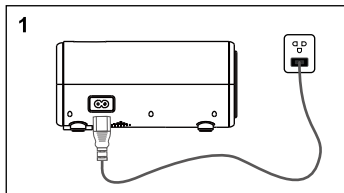


1 Plug the power cord into an outlet

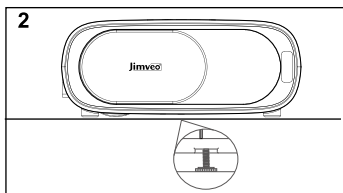

2 Adjust the kickstand accordingly

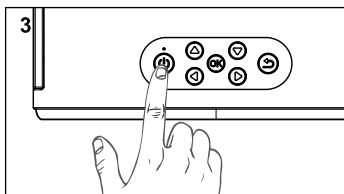


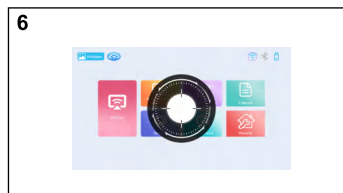
3 Press the power button to turn on the projector.

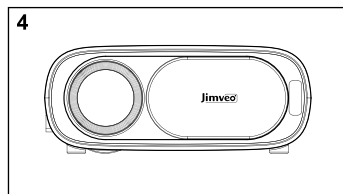
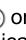 


4 The lens cap will automatically move aside.



5 Press the  button on the remote adjust the horizontal and vertical trapezoid of the projector accordingly. (Please refer to page 017 for detailed instruction)




6 Press the button  or  on the remote, a focus indicator will appear on the image. Please adjust according to the focusing indicator to get the best image effect. (Please refer to page 011 for detailed instruction)

## PERSONALIZED SETTINGS
 
### Wallpaper Setting

Select the [Wallpaper] menu on the homepage, you can set your favorite wallpaper from the local picture. Or you could also choose a picture from your USB drive to set it as your wallpaper.

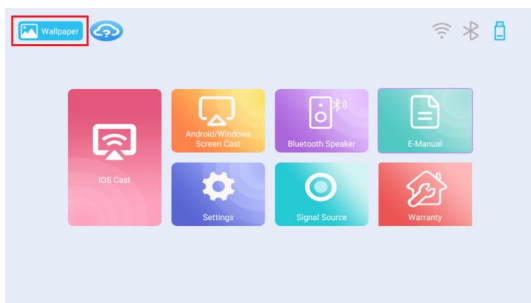



## FOCUS

### Auto Focus

After powering on, the projector can automatically adjust the focus.





 Tips: Please go to Settings > Projection Settings to make sure the option of Auto focus is Open.

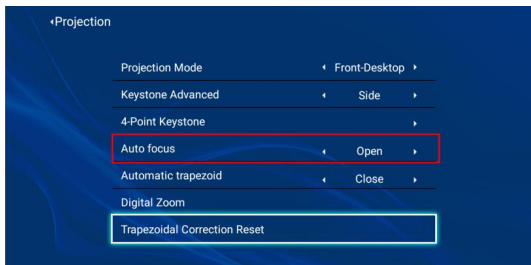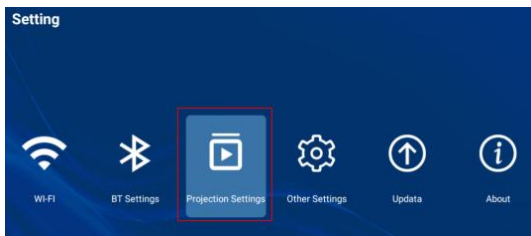

## Manual focus



If the image is not clear enough after the auto focus is made, please press the Focus+ and Focus- button to do a fine-tune.

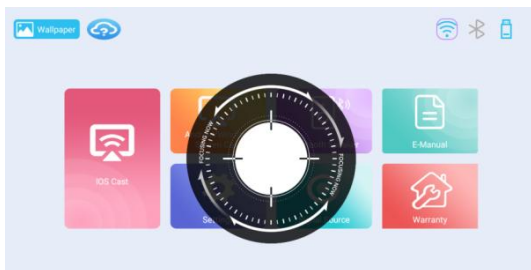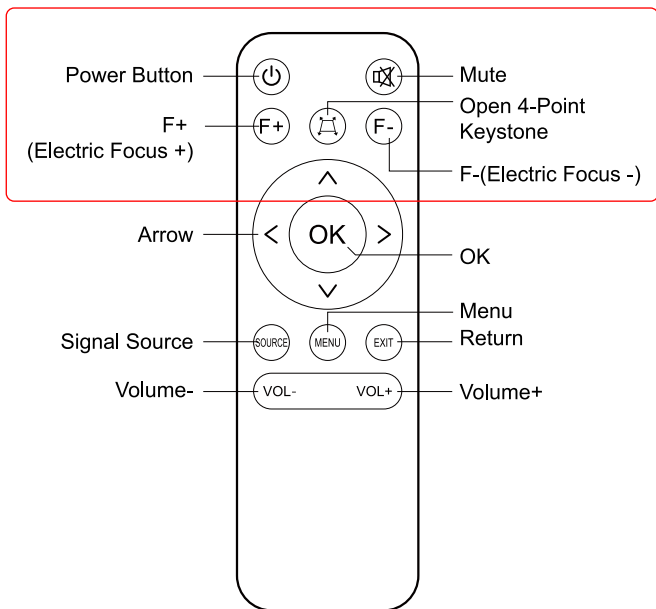


# PROJECTOR IMAGE SETTING

## 1. Installation Method

 
The projector support front and rear projection, it can be table mounted and ceiling mounted. On the home page, choose the “Settings” option. Click on the “Projection Setting” to go to the projection setting page. You can see the “Projection Mode” option, press the left and right button to change to your desired mode.

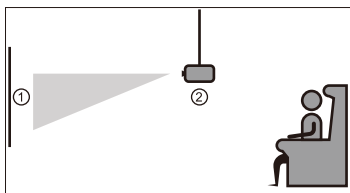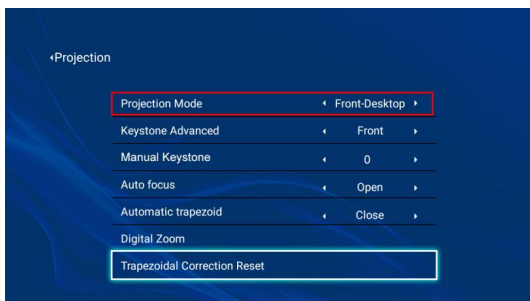


Front/ceiling

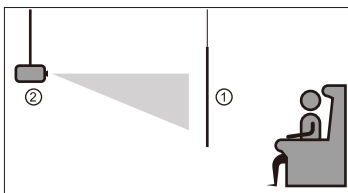

Rear/ceiling

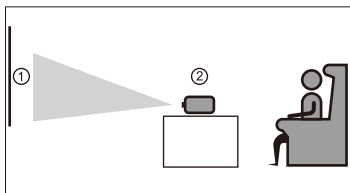


Front

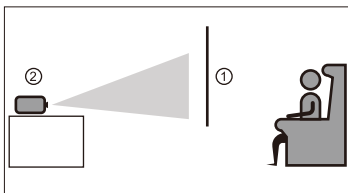

Rear

## 2. Keystone Correction

On the home page, choose the “Settings” option. Click on the “Projection Setting” to go to the projection setting page. There are 3 ways to correct the trapezoid: “Automatic trapezoid Correction”, “Keystone Advanced:Manual Keystone Correction”, and “Keystone Advanced:4-Point Keystone Correction”

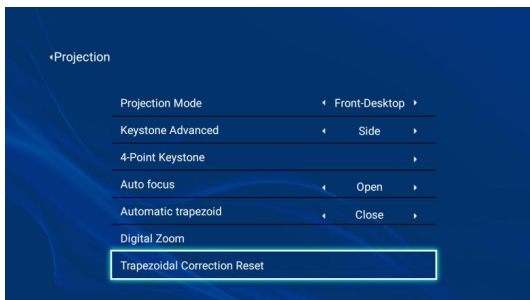


### 2.1 Automatic trapezoid Correction

Note:


- ① Please ensure that your projector is placed flat on the table when using automatic trapezoid correction.
- ② If your projector is placed more than 30° on side, the image clarity will not be able to reach the optimal level, this is the same situation for all LCD projector on the market.
- ③ If the image is still not square after auto horizontal correction, you can slightly adjust the image by pressing the 4P Keystone Correction button on the remote. (The automatic trapezoid correction function will be automatically switched off when 4P Keystone Correction is activated)

#### Instructions for using the automatic trapezoid correction function

- (1) On the home page, choose the “Settings” option. Click on the “Projection Setting” to go to the projection setting page.
- (2) Go to “Automatic trapezoid”, there are two different modes: “Close” and “Open”. Press the left and right button to turn on the “Open” mode. Then it will automatically keystone correct.

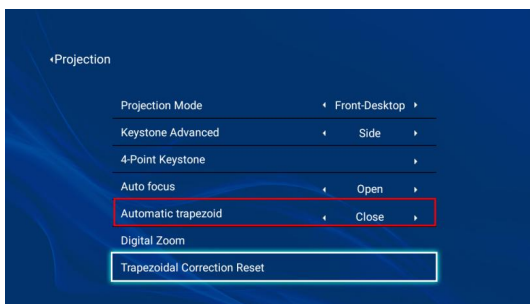

- ① If the projection image shows as (1), Open the Automatic trapezoid, It will achieve the projection image (2).
- ② If the projection image shows as (3), Open the Automatic trapezoid, It will achieve the projection image (4).

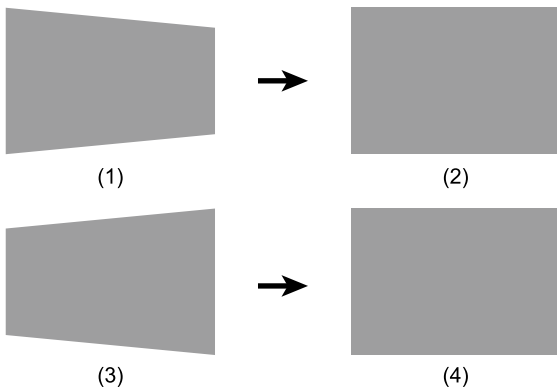


## 2.2 Manual Keystone Correction

(1) On the home page, choose the “Settings” option. Click on the “Projection Setting” to go to the projection setting page.


(2) Press the button to select the “Keystone Advanced” menu and press the left and right button to select the “Front”. Then you will see the “Manual Keystone” option and select it. Press the left and right button to adjust the image.



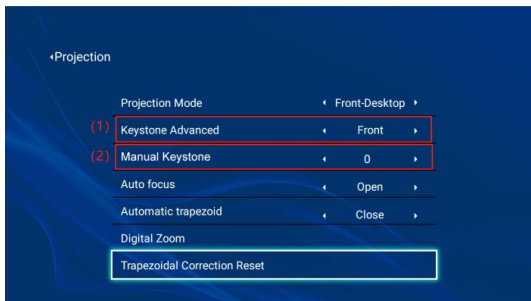

① If the projection image shows as (5), press the right button on the remote or projector to increase the vertical parameter (-50-0), until to achieve the projection image (6).


② If the projection image shows as (7), then press the left button on the remote or projector, and decrease the vertical parameter (0-50), until to achieve the projection image (8).

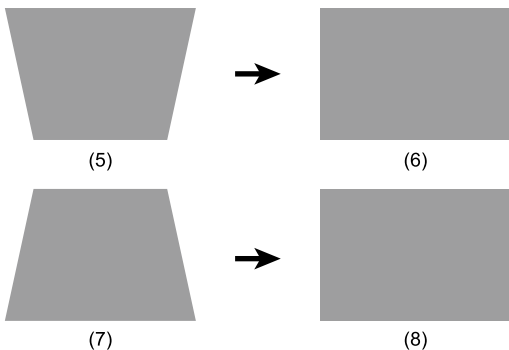


### 2.3 4-Point Keystone Correction

(1) On the home page, choose the “Settings” option. Click on the “Projection Setting” to go to the projection setting page.

(2) Go to “Keystone Advanced”, there are two different modes: Front and “Side”. Press the left and right button to choose the Side mode. Then you will see the “4-Point Keystone” option. Press the right button to go to the adjusting page.

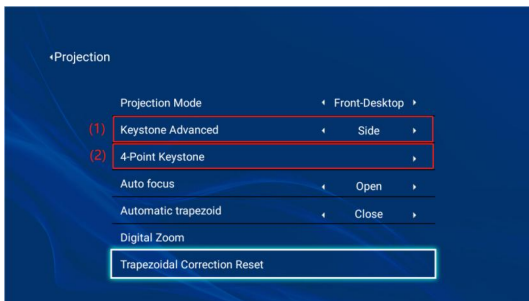

(3) Press "OK" button to go to the 4-Point Keystone Correction Setting Page. Press the arrow keys to adjust the 4 corners of the picture.

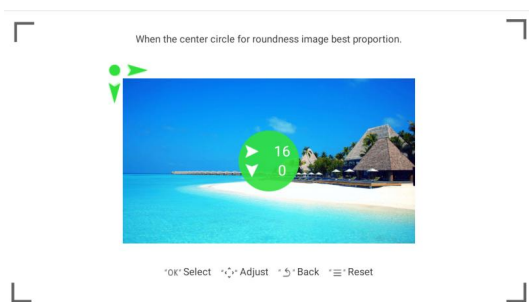



Tips: You can press the [Menu] button on the remote control to restore the image if necessary.

## 2.4 Zoom Function

(1) Choose the "Digital Zoom" option.


(2) Press left and right button to adjust the size of the image. You can adjust the screen size from 100% to 50%.

Tips: If you are not satisfied with the adjusted screen, you can click the [Menu] button of the remote control to restore the screen and then re-adjust it.

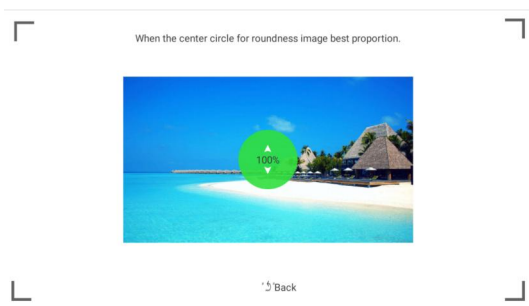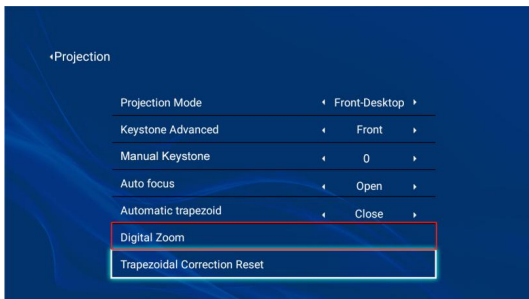


## INPUT SOURCE

Click [Signal Source] on the home page and choose the connection method.

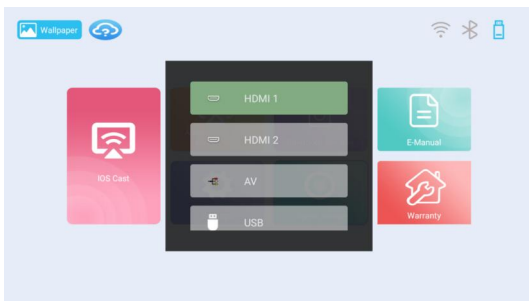


## 1.USB Connection



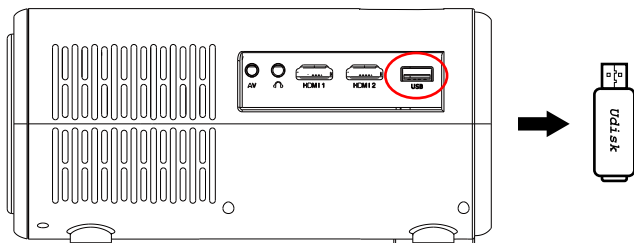



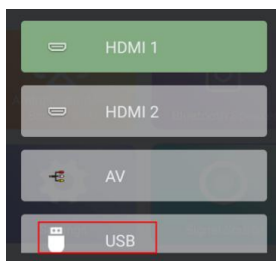




**Step 1:** Plug the USB in, and the USB icon will light up.



**Step 2:** Select USB as the input source and the contents on your device will be displayed on the projection screen.




## Video Play

 Symbol	Function
	Play/Pause the video
	Last video
	Next video
	Fast forward the video
	Rewind the video
	Adjust the video time you want to play
	Playlist
	Media Information
	Playing settings.
	Select the start & end points to play the segment repeatedly.
	Adjust the playback mode: Sequential Play/Single Cycle/Random Play

## Picture Play

Click the icon  and adjust the picture.

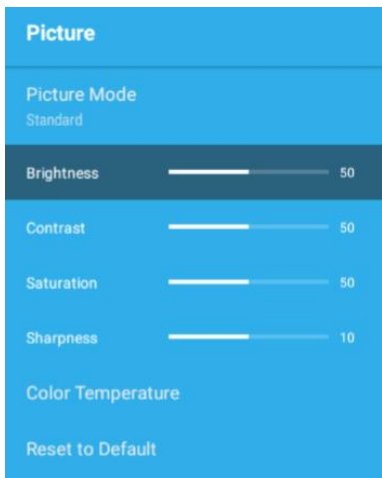


## Office Documents Play


Choose your desired file on the USB. When playing the PPT, press the left and right buttons to change to the next and last slide. Click on the "Setting" icon to get more options. You can choose to start the PPT from the current slide, go to a designated slide, or export the PPT to a PDF document. The projector will react a little slower when opening office documents, please be patient.

## 2.HDMI Connection

Step 1: Turn on the projector and connect your device to any HDMI port on the projector with an HDMI cable.

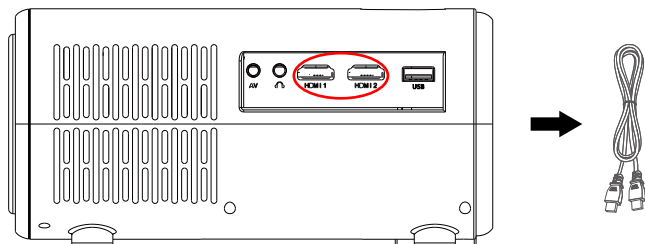


Step 2: Select HDMI as the input source and the contents on your device will be displayed on the projection screen.

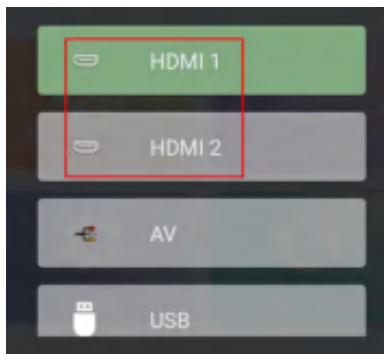


### 3. Speaker/Headphones Connection

Directly connect the wired speaker and your headphones/earphones to the Audio Out port on the projector with a 3.5mm audio cable.

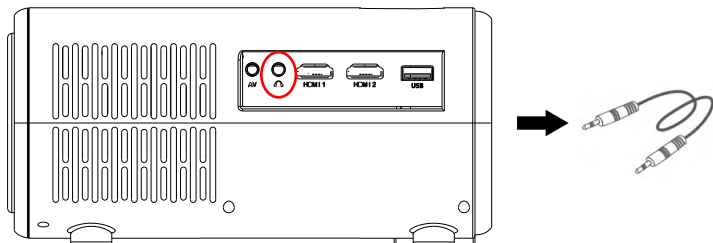


### 4. AV Connection

Step 1: Turn on the projector and connect your device to the AV port on the projector with the AV cable.

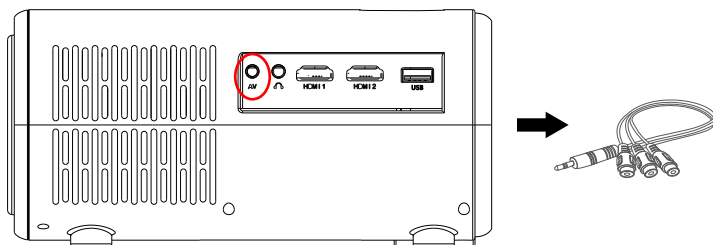



Step 2: Select AV as the input source and the contents on your device will be displayed on the projection screen.

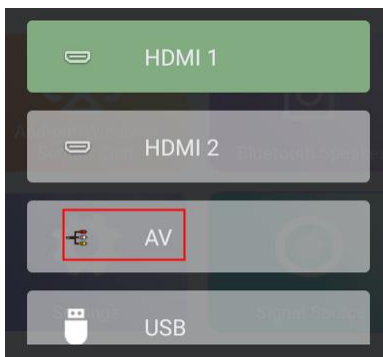

## WIRELESS PROJECTION

### Warming Tips:

- ① The fluency of screen mirroring with wireless connection will be affected by the network environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ② Make sure your mobile device is close to the projector when using wireless connection. A distance within 1 meter is recommended.
- ③ Some mobile devices may not support screen mirroring due to the compatibility.
- ④ Any questions, please feel free to email Jimveo via

US:Support\_us@jimveo.com


CA/EU:Support@jimveo.com

JP:Support\_jp@jimveo.com


### For iOS Devices


Step1: Connect the projector and your mobile device to the same WiFi.

Step2: Select 「WI-FI」 on the homepage or directly go to Settings > WiFi to connect your projector to a working WiFi.

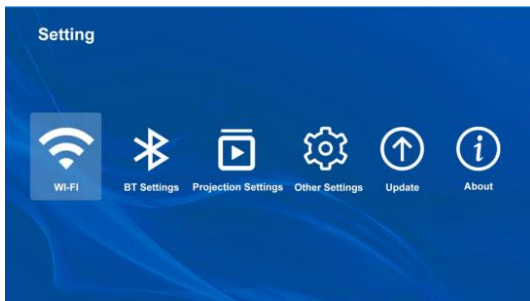


 Step 3: Go to Homepage of the projector and select [iOS Cast] to enter the screen mirroring interface.

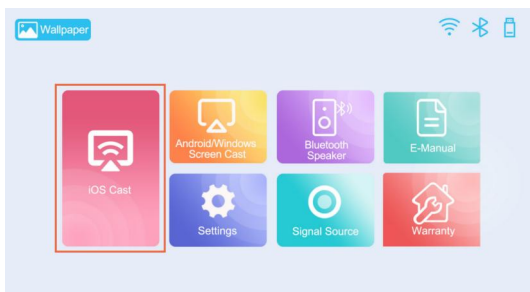

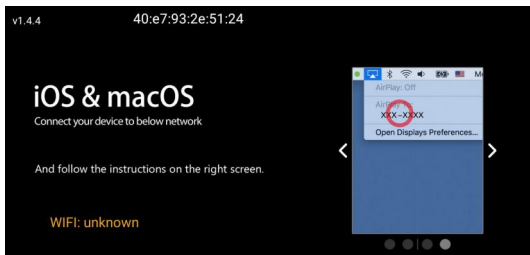

Step 4: Go to the Control Center of your iOS device and select Screen Mirroring. Then select [Hify-XXXX] from the searching list.

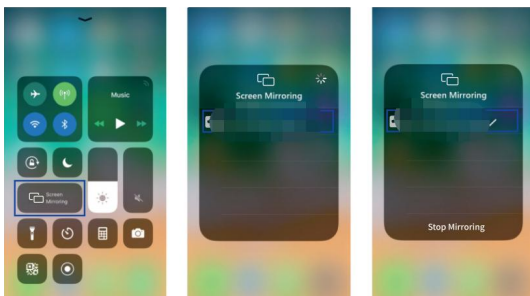


Step 5: The contents on your iOS device will be mirrored on the projection screen.

## For Android Devices

Make sure your Android device supports the mirroring function.

Step 1: Go to the settings of your Android device to turn on the WiFi switch.

Step 2: Go to Homepage of the projector and select [Android/Windows Screen Cast] to enter the screen mirroring interface.

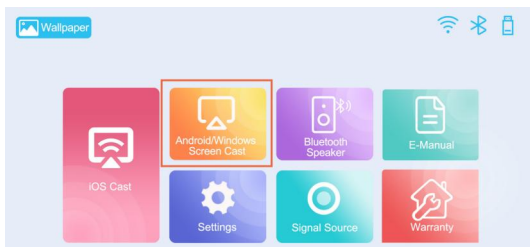

**Screen Mirroring for Android & Win 10 PC**



- ① Turn on the WLAN on your Android phone.
- ② Tap the [Wireless Projection] or [Screen mirroring] function on your phone.
- ③ Select [E30-XXXX] to connect and start projection.

① スマホのWLANをオンにする  
② 設定から「ワイヤレス接続」もしくは「画面ミラーリング」を選択する  
③ プロジェクターの端末「E30-xxxx」を選択して接続する。



 
- ① Connect your Win10 PC to your home WiFi.
- ② Press [Win+K] on the keyboard of your PC.
- ③ Select [E30-XXXX] to connect and start projection.

① ご自宅のWiFiにWin10を接続する。  
② [Win] キー + [K] キーを同時に押すと、デバイスの接続画面を開く。  
③ プロジェクターの端末「E30-xxxx」を選択して接続したら完成。



Operative videos are prepared, scan code or search "jimveo" on YouTube to get started with E30 projector visually. Any issues, please feel free to contact email below:  
 操作手順の動画に参考をご希望の方はQRコードを読み取ってください。48時間内対応可能なアフターサービス:  
[support\\_us@jimveo.com](mailto:support_us@jimveo.com)   [support\\_jp@jimveo.com](mailto:support_jp@jimveo.com)   [support@jimveo.com](mailto:support@jimveo.com)

Step 3: Activate the cast/wireless display function on your Android device, then select [E30-XXXX ] from the searching list.

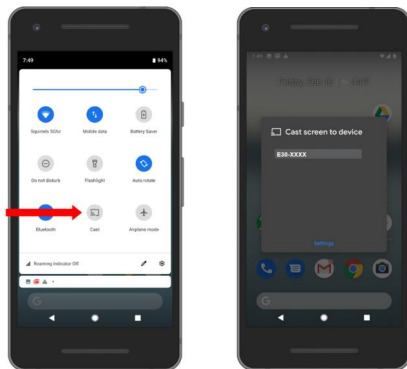


Step 4: The contents on your Android device will be mirrored on the projection screen.

### For Window Devices

Make sure your Windows device supports the mirroring function.

Step 1: Go to the settings of your Windows device to turn on the WiFi switch.

Step 2: Go to Homepage of the projector and select [Android/Windows Screen Cast] to enter the screen mirroring interface.

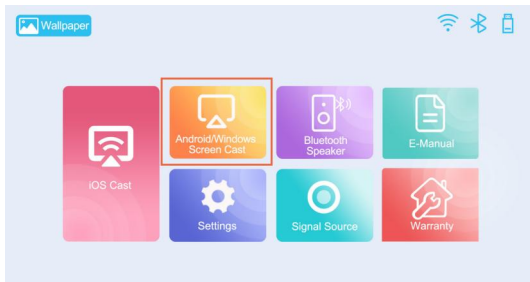


### Screen Mirroring for Android & Win 10 PC

- ① Turn on the WLAN on your Android phone.
- ② Tap the [Wireless Projection] or [Screen mirroring] function on your phone.
- ③ Select [E30-XXXX] to connect and start projection.
- ④ スマホのWLANをオンにする
- ⑤ 設定から「ワイヤレス接続」もしくは「画面ミラーリング」を選択する
- ⑥ プロジェクターの端末 [E30-xxxx] を選択して接続する。

- ① Connect your Win10 PC to your home WiFi.
- ② Press [Win+K] on the keyboard of your PC.
- ③ Select [E30-XXXX] to connect and start projection.
- ④ ご自宅のWiFiにWin10を接続する。
- ⑤ [Win] キー + [K] キーを同時に押すと、デバイスの接続画面を開く。
- ⑥ プロジェクターの端末 [E30-xxxx] を選択して接続したら完成。

Operative videos are prepared, scan code or search "jimveo" on YouTube to get started with E30 projector visually. Any issues, please feel free to contact email below:  
 操作手順の動画に参考をご希望の方はQRコードを読み取ってください。48時間内対応可能なアフターサービス:  
 support\_us@jimveo.com support\_jp@jimveo.com support@jimveo.com

Step 3: Press the "Windows + P" on the keyboard of your PC and select [Connect to a wireless display] , choose "Duplicate" mode and enter the interface.

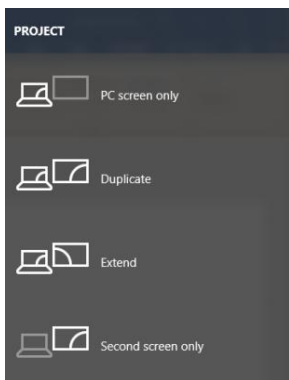



Step4: Select [E30-XXXX] from the searching list and the content on your Windows device will be mirrored on the projection screen.

## BLUETOOTH CONNECTION

### Connect to an External Bluetooth Speaker

Step 1: Turn on your Bluetooth device and make it ready for a Bluetooth connection.

Step 2: In the home page, click the “ ” to go to the Bluetooth Setting page. or go to Settings > BT Settings and enter the interface below.

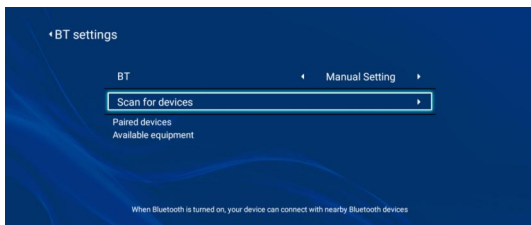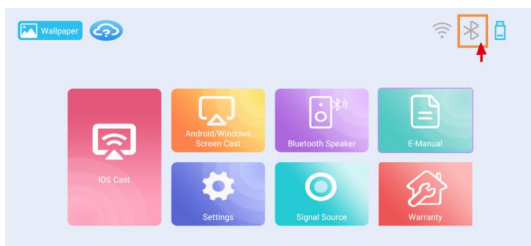



Step 3 Press the Left/Right button to select the BT options as Manual Setting, then select Scan for devices to start searching for available Bluetooth devices.


Step 4: Select the name of your Bluetooth device to pair. It will show "Connected " after you connected successfully with your BT device.

## Use as A Bluetooth Speaker

Step 1: Go to Homepage > Bluetooth Speaker Mode to enter the the connection page.

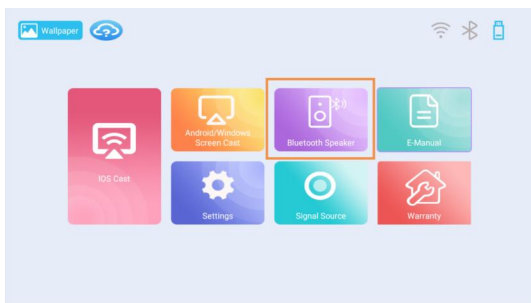

 
Or you can press  on the remote to see more setting options. Select BT receive to enter the connection page.

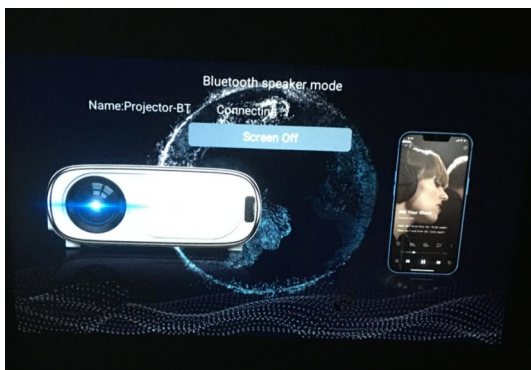

Step 2: Open the Bluetooth function on your mobile phone, search available devices and choose [Projector BT] to pair. It will show "Connected" after you connected successfully with your phone.

Tips: Select [Screen Off] and press "Ok" button, you could turn off the projection screen. You could wake up the screen by press any button on the remote.

## OTHER SETTINGS

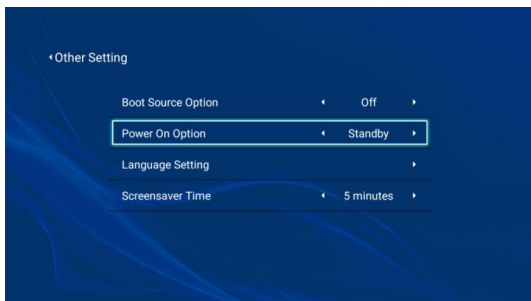

Menu	Options	Function
Boot Source Option	AV/USB/HDMI1/HDMI2	Select signal source
Power on Option	Direct/Standby	
Language Setting	English/Japanese/France/ Spanish etc	Set up the language
Screensaver Time	off/5min/10min/20min/ 30min/45min/60min	Set up the time of Screensaver
Screen saver timeout	off/15min/30min/45min/60min/ 75min/ 90min/120min	Setting the power-off time

### About the Power-on Option Mode

**Power-on Direct Mode:** When the projector is powered on, it will start (working) automatically.



**Power-on standby Mode:** When the projector is powered on, you need to press the button on the remote or projector to turn on the projector.


 
### About Screensaver Time Option

After setting this time, the projector will automatically enter the wallpaper display when there is no operation on the operation interface.

### About Screensaver Timeout Shutdown Option

After setting this time, when the wallpaper display time reaches the set time, the projector will automatically shut down.

## SYSTEM UPDATE

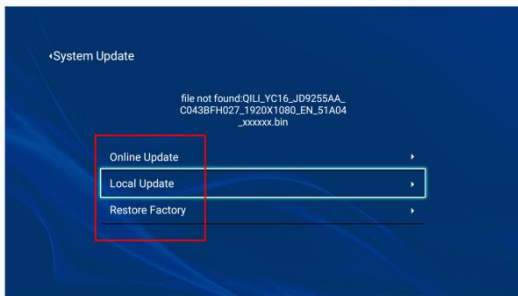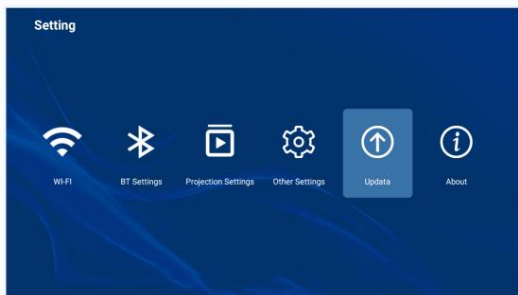

How to Upgrade Online:

Update -- Online Update -- Wait for about 15mins--Finished.

How to Upgrade Local:

Update -- Local Update -- Insert USB with updated software(You should contact us via email and we will sent the updated software to you) --

Following the software instructions -- Finished.

Update it to Experience New!

Easy Online Update Method


We are continually working to provide upgraded better systems.

Restore Factory:

We prepared detailed instruction videos on YouTube for you about how to restore factory, you can search "Jimveo" on YouTube to find them or you can contact us via emails.

## Projection Distance and Size

If you want to get a free projection screen, please email us via [Support\\_us@jimveo.com](mailto:Support_us@jimveo.com). Please follow the data in chart below, to adjust the image size and the distance.

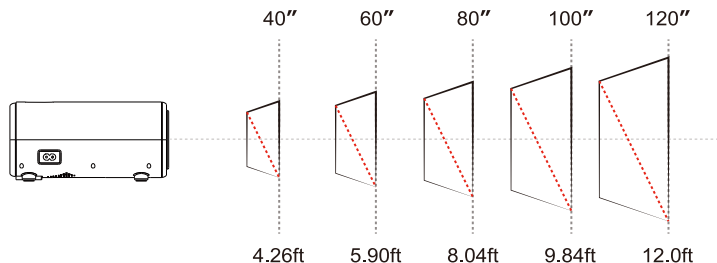

Aspect Ratio	16:9/4:3	Aspect Ratio	16:9/4:3
1.3m	40"	3.65m	120"
1.8m	60"	4.9m	160"
2.45m	80"	5.5m	180"
3.0m	100"	6.3m	200"

Please note:

1.The best image quality would be achieved with a projection distance of 6.5-8.5ft. A larger screen size would affect the image quality in a certain degree.

2.The image size depends on the distance between projector and screen,there may be 3% deviation among above listed data. Different settings cause various distances.


## Install on the Ceiling

If you want to get a Ceiling brackets,please email us via

US:Support\_us@jimveo.com;

CA/EU:Support@jimveo.com;

JP:Support\_jp@jimveo.com

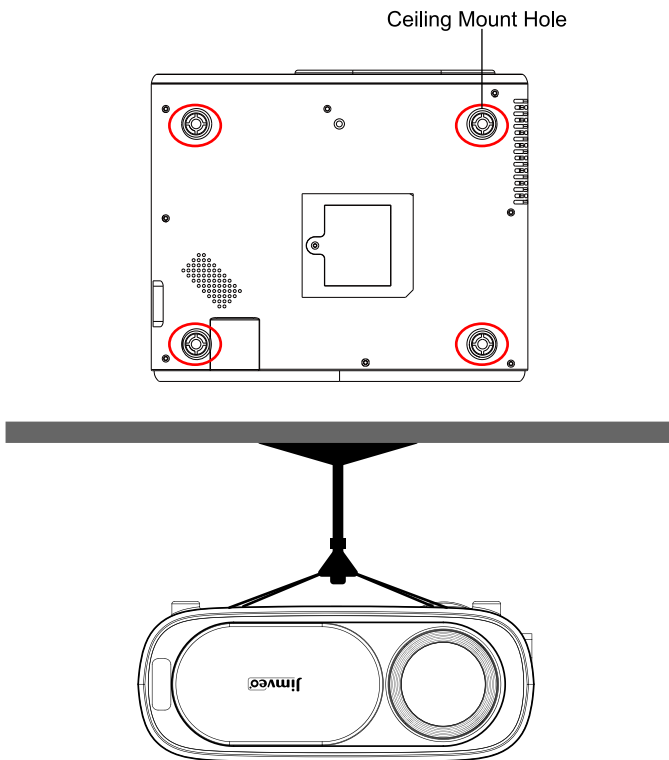

## PROJECTION SPECIFICATIONS

<b>Model</b>	<b>E30</b>
Product Dimensions	25.6*20.9*10CM
Product Weight	2.35KG
Display technology	LCD
Resolution	Native 1920*1080P
Aspect ratio	16:9, 4:3
Installation Type	Front Table/Rear Table/ Front Ceiling/Rear Ceiling
Input Signal	480P, 576i, 576P, 720i, 720P, 1080i, 1080P
Remote control distance	7 Meters
Focus method	Motorized focus/auto focus
Light source	LED
WIFI	2.4G/5G
Bluetooth	2.4G
Picture Format Supported	PNG/BMP/ JPG
Ports	AV*1/headphone*1/HD*2/USB*1/Fiber port*1
Input voltage	AC 100-240V, 50/60Hz
Video Format Supported	MP3/AVI/WMV/MKV/DAT/VOB/MPG/MPEG/ TSAVI/MKV/MP4/MOV/MPG/MPEG/TS/TP/ M2TS/DAT/FLV/SWF/ASF/VOB/RM
Audio Format Supported	MPEG1/MPEG2/LPCM/MP3/WMA2/ AAC/WAV

\*Any buyer with any questions who comes to contact us will have our promise to get a satisfactory solution + an Extra 6-Month Warranty to thanks for your support!

**Jimveo**